



FVN6193

VETTA


INSTALLATION GUIDE

CONTENTS:


Cabinet.....(FCB6193)	PAGE 2
Sink.....(FVS6193)	PAGE 2
Mirror.....(FMR6193)	PAGE 2
Shelf.....(FSF6193)	PAGE 3
Countertop.....(FCT6193)	PAGE 2



FVN6193
VETTA
INSTALLATION GUIDE


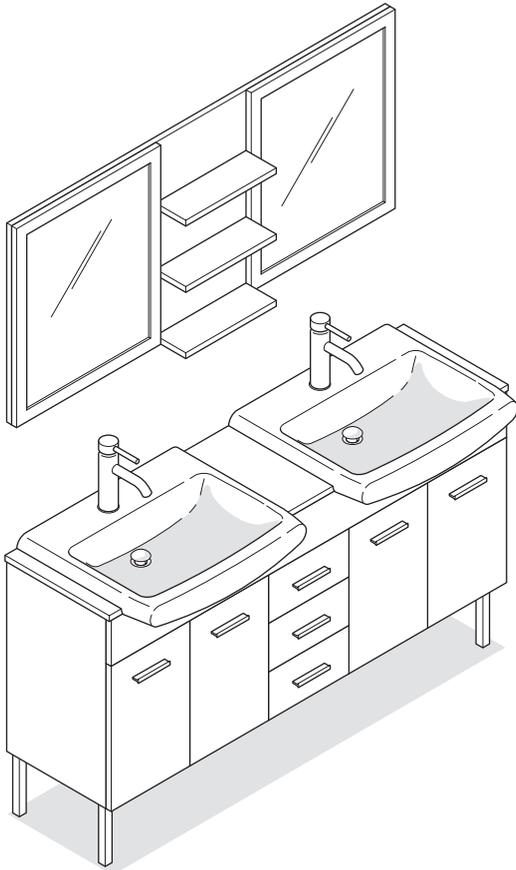


Vanity Front

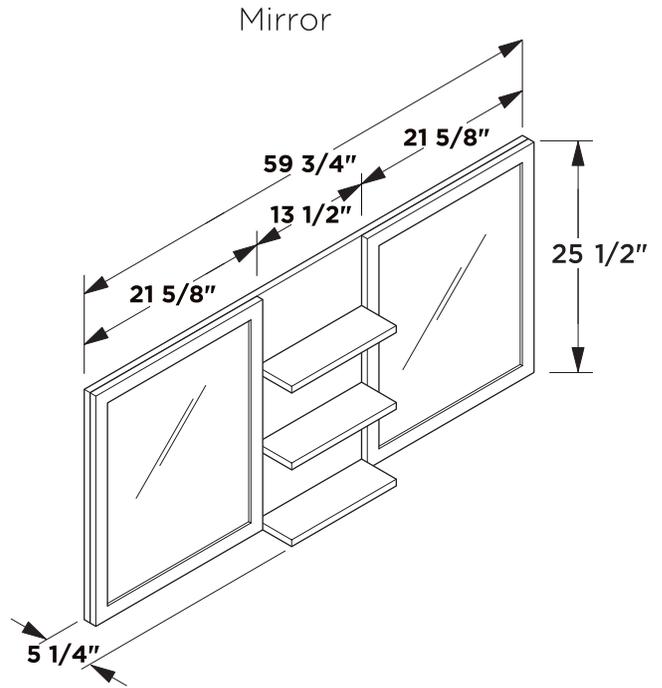



Mirror

Vanity Back

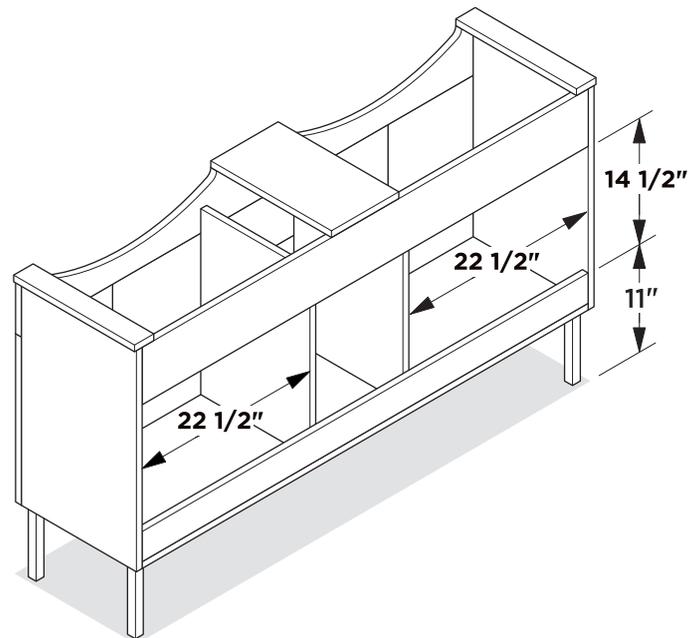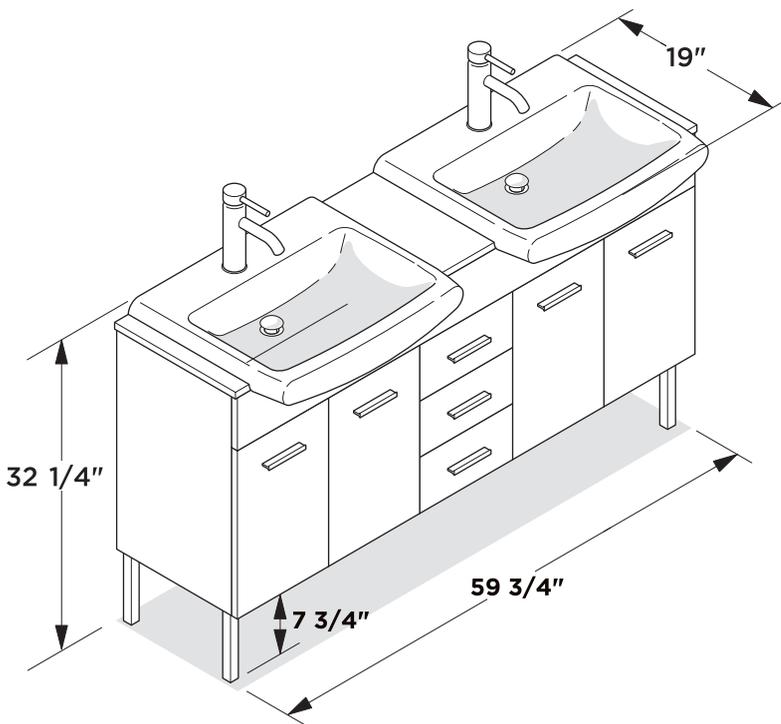


NOTE: ALL DIMENSIONS & SPECIFICATIONS ARE APPROXIMATE AND SUBJECT TO CHANGE WITHOUT NOTICE.

TOOLS FOR ASSEMBLY

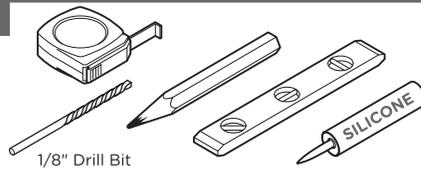


1/8" Drill Bit

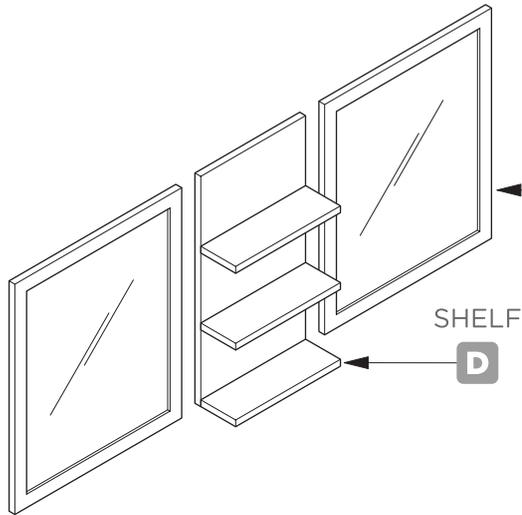

MIRROR

COUNTERTOP

SHELF

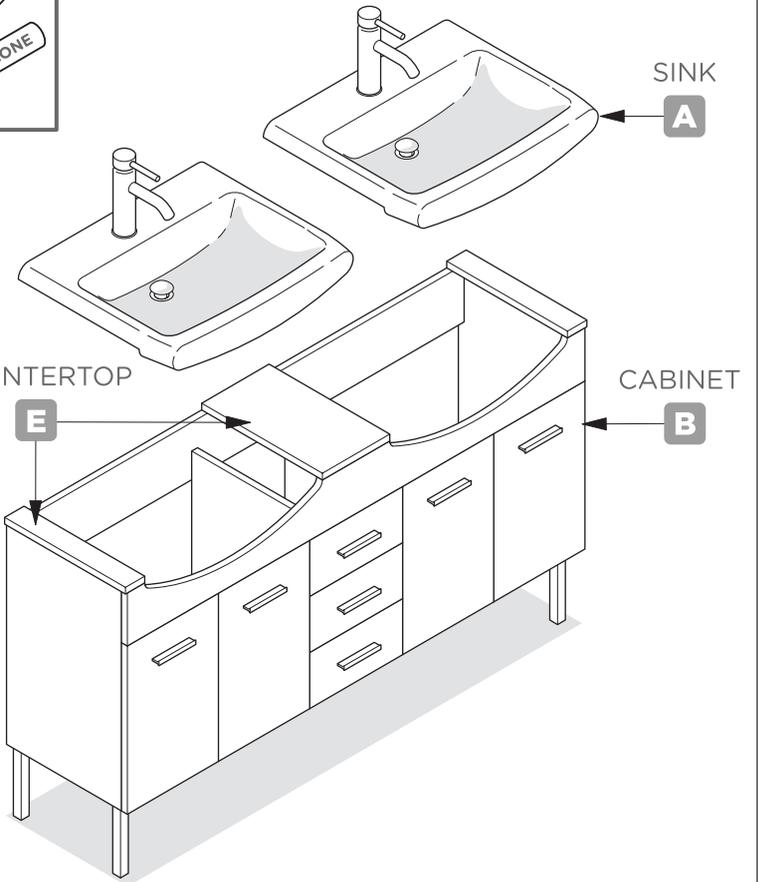

SINK

A


CABINET

B

E


1 Install cabinet (B)

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.

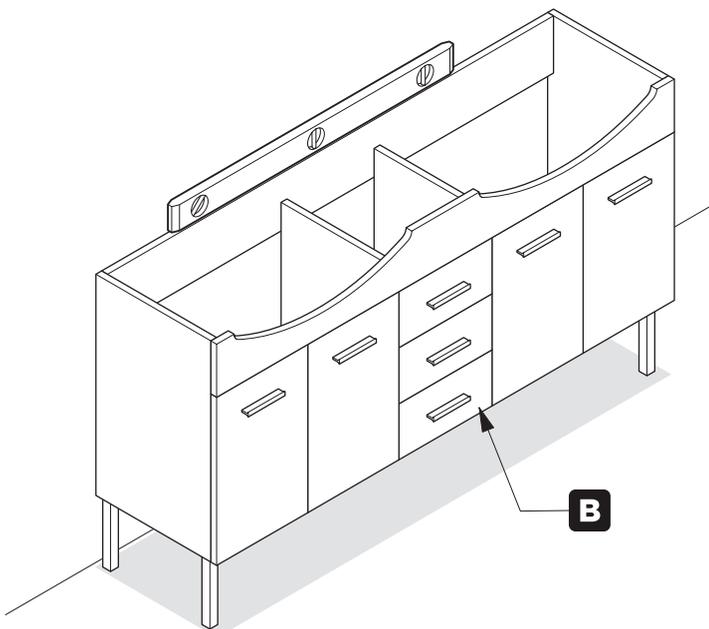

B

2 Apply silicone and install sinks (A)

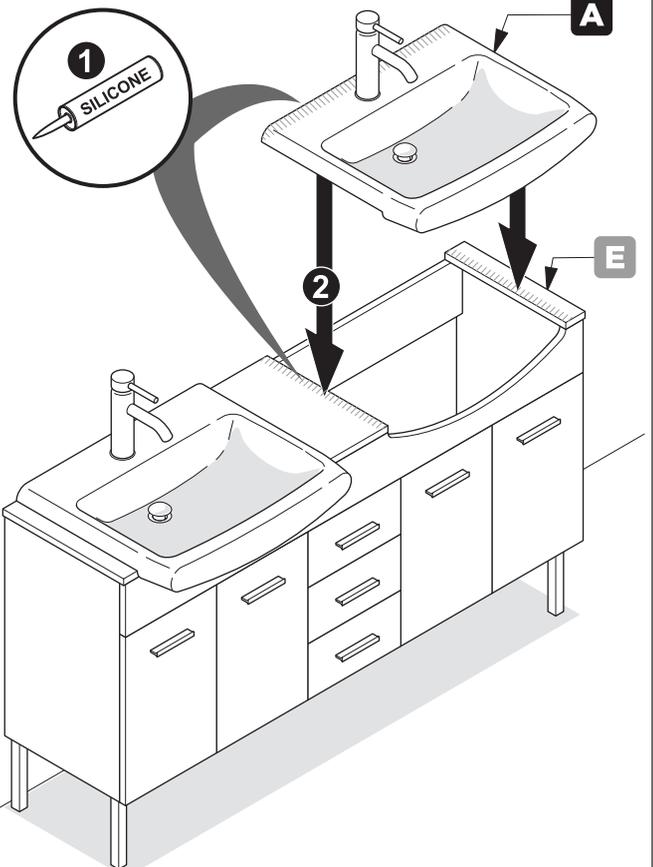

1

SILICONE

A

2

E


TOOLS FOR ASSEMBLY




MIRROR & SHELF INSTALLATION

1

Mark the wall with a pencil using a level for the mounting position.


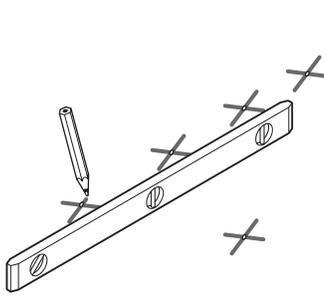


NOTE: Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided do not attach to all wall construction types.

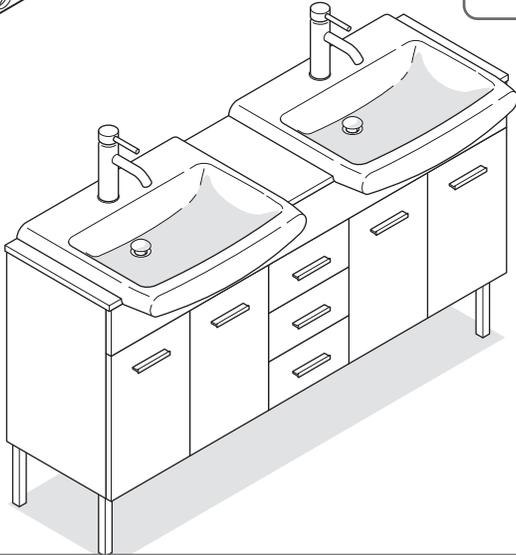



2

Attach a shelf to the wall with screws.

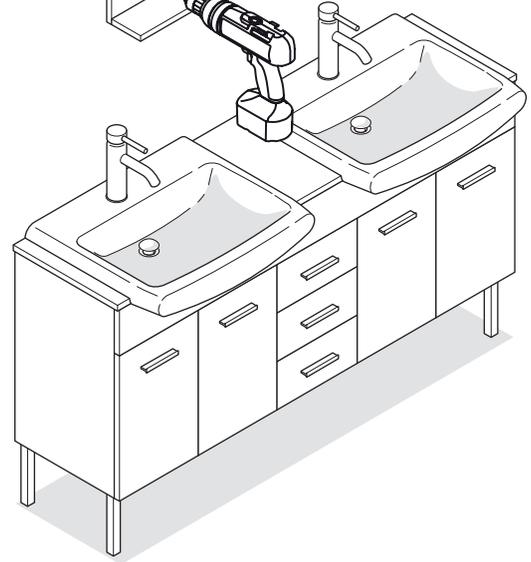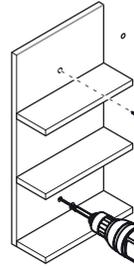



3

Insert screws into the wall with a drill leaving just a tip outside the wall.

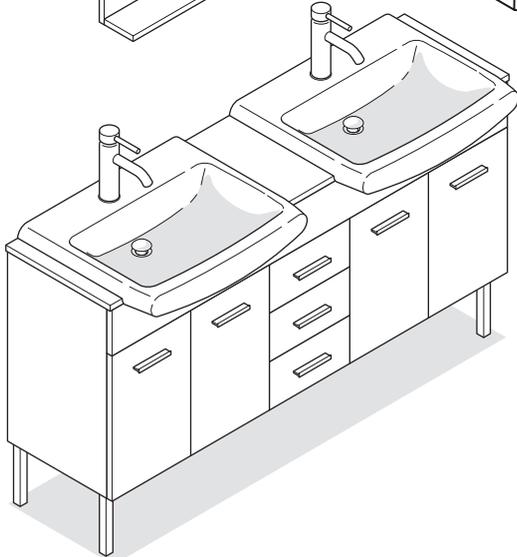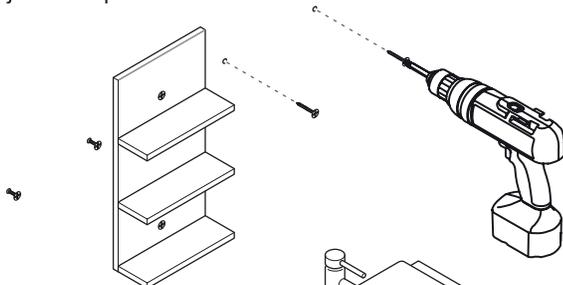

4

Hang mirrors on the wall.

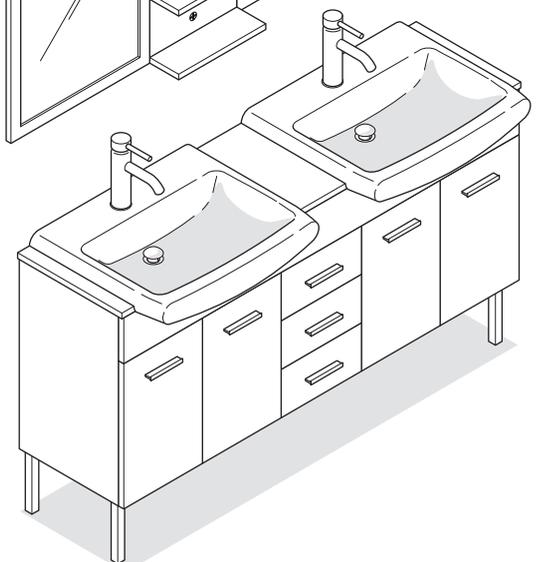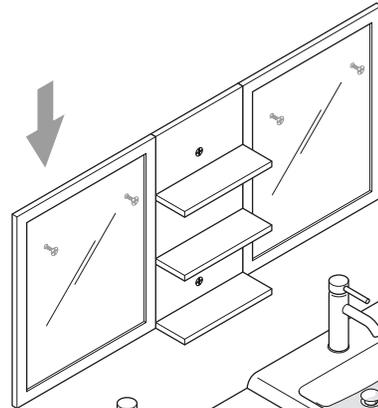

FVN6193


VETTA

INSTALLATION GUIDE

PAGE 3


P-TRAP & POP-UP INSTALLATION INSTRUCTIONS

Your item may appear slightly different from the illustration.

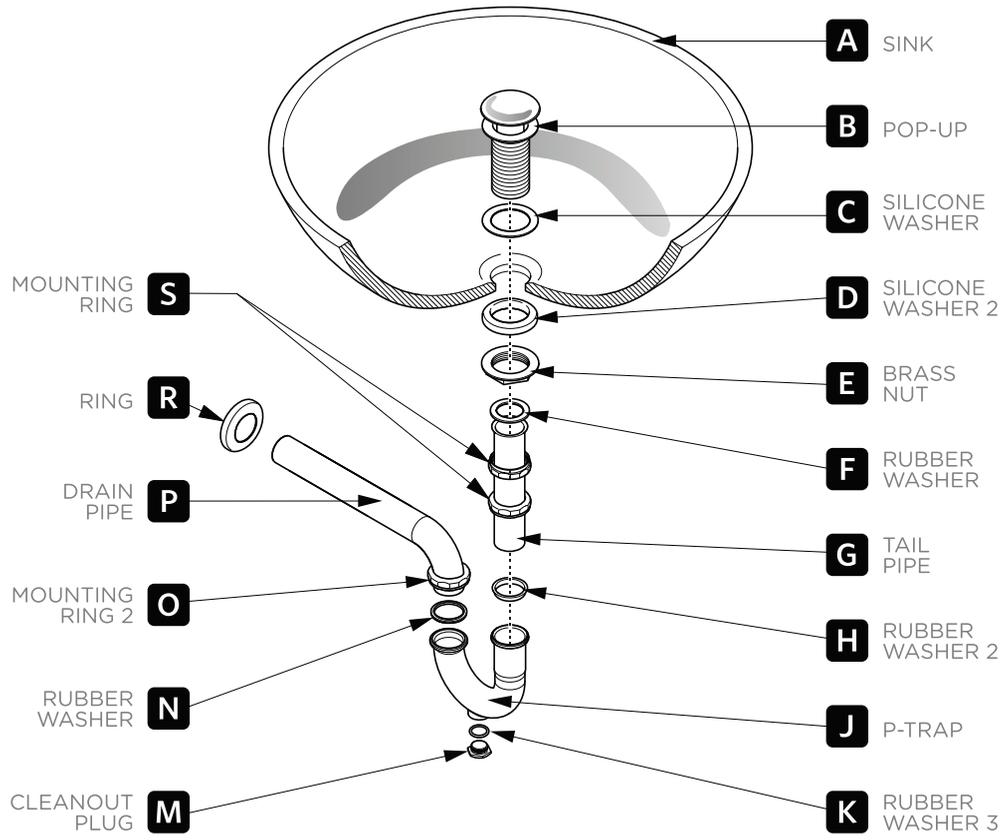


POP-UP INSTALLATION

**FOR SINKS
WITHOUT OVERFLOW**

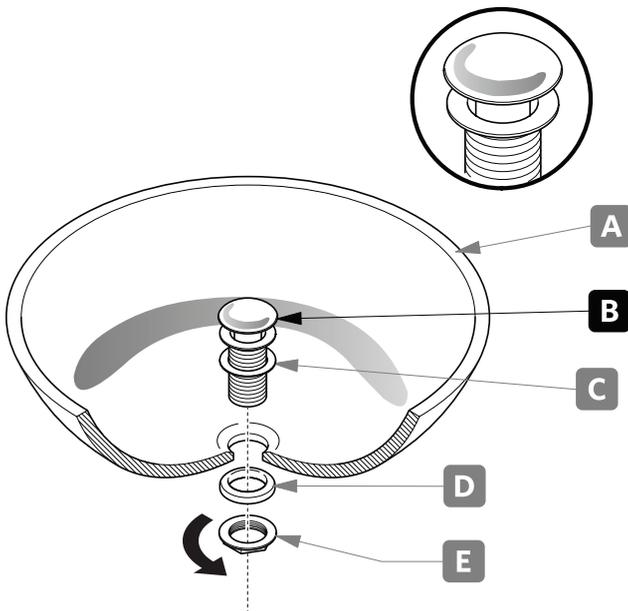


OR

**FOR SINKS
WITH OVERFLOW**

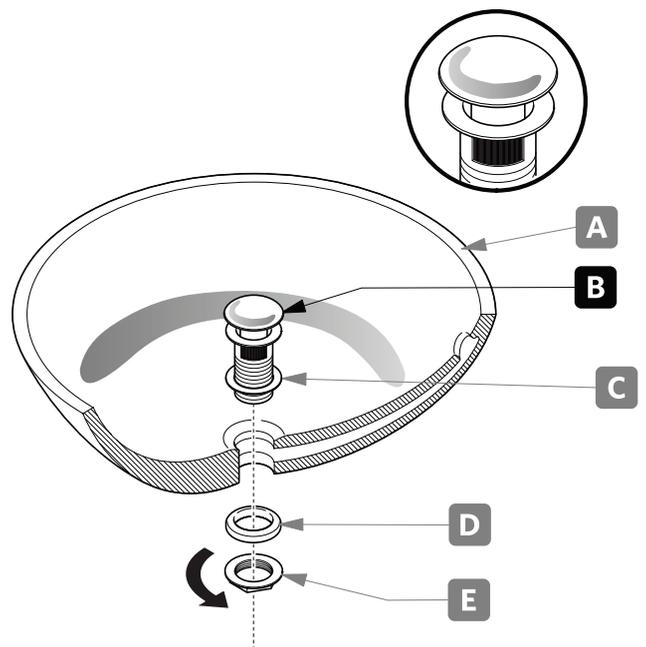

P-TRAP INSTALLATION

1. Install tail pipe (G).

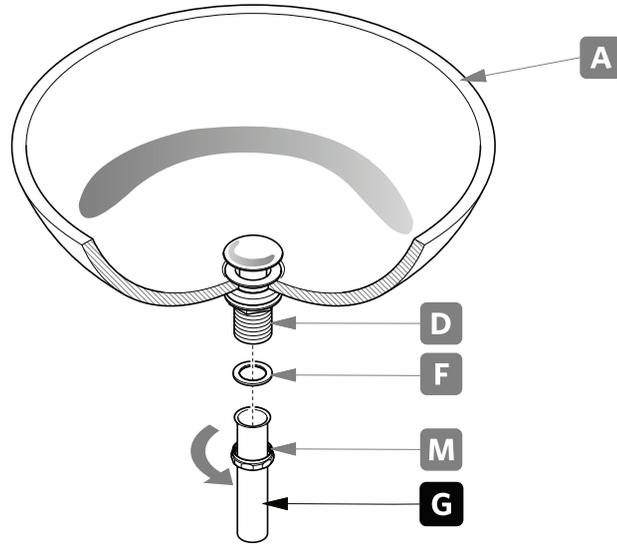

2. Install P-trap (J).

