

©2014 Fresca <sup>™</sup> All rights reserved. This material may not be reproduced, displayed, modified or distributed without the express prior written permission of the copyright holder.


The reserved. This indential may not be reproduced, displayed, modified or distributed without the express prior written permission

#### **Before Installation**

- 1. Read the instruction carefully to be familiar with the tools, fittings and installation procedures to prevent any unnecessary damage.
- 2. Check the fittings follow the fitting form and check whether there is any damage of the product
- 3. Check whether the roughing-in on installing position is aligned with the one of product.Realize all the stipulates for pipelines preposing for water supply.
- 4. Because the ceramics is easy to be damaged, please handle it gently and the nut should not be overtightened.
- 5. The floor of installation position should be flat and hard.
- 6. If you want to change the water closet, please turn off water supply and flush the water closet to make sure no water remains inside the product.Remove the soft pipe for water supply, and unfasten screws. Then remove the water closet and the old gasket and clean the end of the outlet of drainage.


Note: Please plug the drainage outlet on the floor if you do not install the product at once.

- 7. Make sure the water supply has been turned off.
- Note: 1. Refer to the newest information of the printed matter. We reserve the rights to change the features, packing and fittings of the products without notice.
  - 2. Please keep the installation instruction carefully(including installation procedure, fitting form, trouble shooting and notice.)




# 1. Mark installing holes

Mark the installing position for mounting screws and connecting pipe as illustrated(drawing for distance of installing holes).

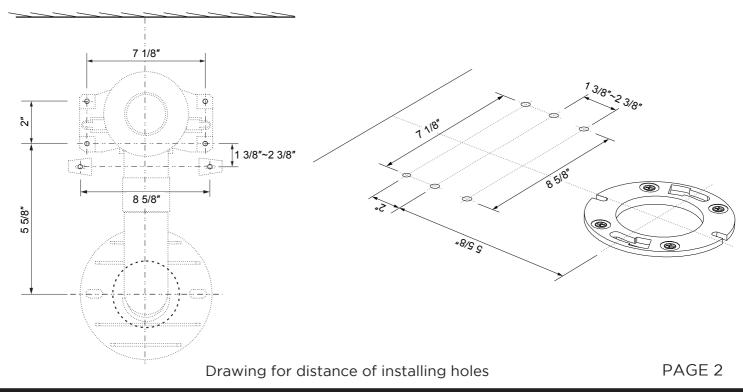


©2014 Fresca M All rights reserved. This material may not be reproduced, displayed, modified or distributed without the express prior written permission of the copyright holder.

### 2. Install the connect pipe

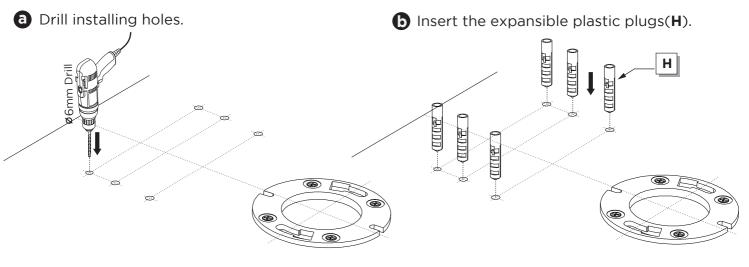


**C** Take off the connecting pipe from the bottom of toilet body(**A**).

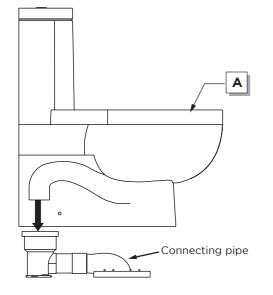


• Adjust the screws(E) to get the fours holes on the back side of connecting pipe aligned with expansible plastic plugs on the floor.Fix the connecting pipe as illustrated.

• Make the bottom of connecting pipe up towards,then cover the flange(**D**) onto water outlet tightly.Make sure the pipe is not plugged.

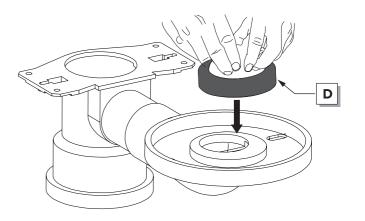

• Fix the plastic brackets(G) by screws(E).

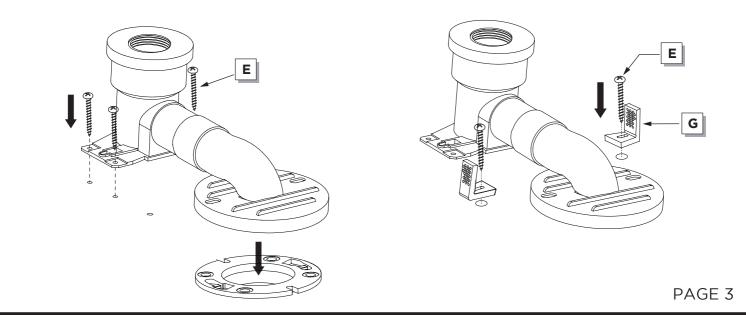


©2014 Fresca M All rights reserved. This material may not be reproduced, displayed, modified or distributed without the express prior written permission of the copyright holder.


# 3. Install toilet body

a Put up the water closet and make sure the two pieces of mounting screws are all through the installing holes of water closet.Get the centre line of water closet aligned with the centre line on the floor and then put down the water closet gently.

Note: Make sure the pipe is through the 4 layers of sealing rubber spacer of connecting pipe after installing the product.Otherwise it will have bad effect for flushing function.

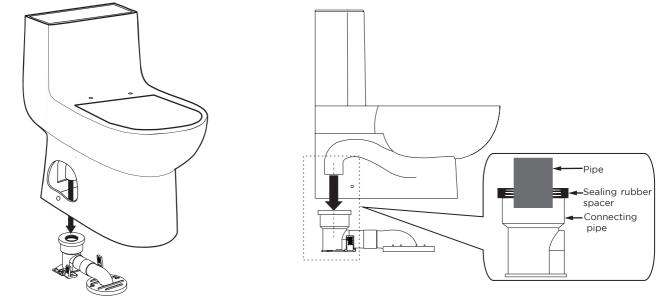


Fix the product on the floor with screws (F) and plastic covers(J), then cover the decoration caps(I).

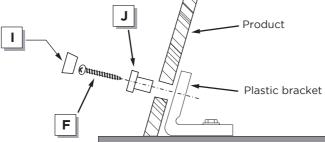



# 4. Connect water supply pipe and check sealing performance

Get the water supply valve and the water inlet with soft connecting pipe. (If the fitting is separared filter, please connect filter first) Turn on the water supply valve and make sure there is no leakage for every joint. Fasten the nuts a little can prevent leakage.

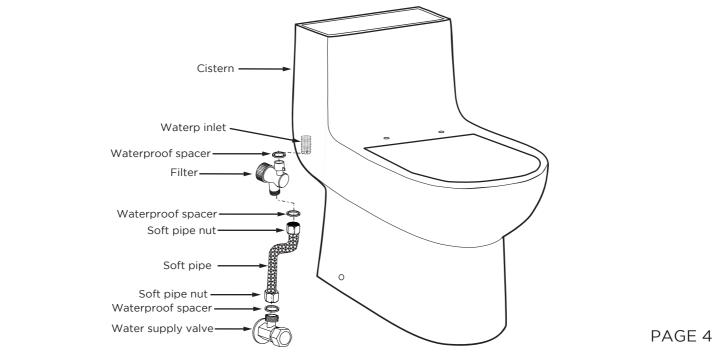


©2014 Fresca \*\* All rights reserved. This material may not be reproduced, displayed, modified or distributed without the express prior written permission of the copyright holder.

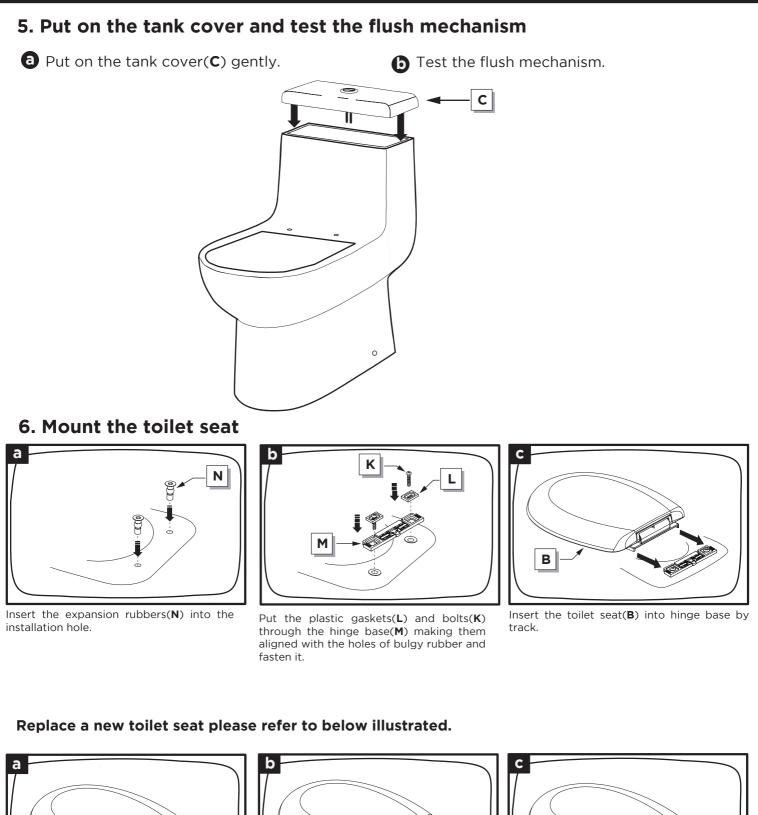

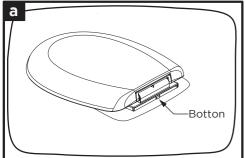

Press the button and loose your hand until you hear a click.

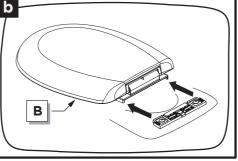

- Take away the toilet seat(**B**).
- C B
- Insert the new toilet  $\mbox{seat}({\bf B})$  into hinge base by track.

# 7. Install toilet

Install the water closet seat according to the installation instruction, then daub a layer of silicone between the product and floor.

Note: Do not use the product immediately after finishing installing. Make sure there is no water around the product about 24 hours.

