





FVN3021  
**DISTINTO  
INSTALLATION GUIDE**

  
**FRESCA**


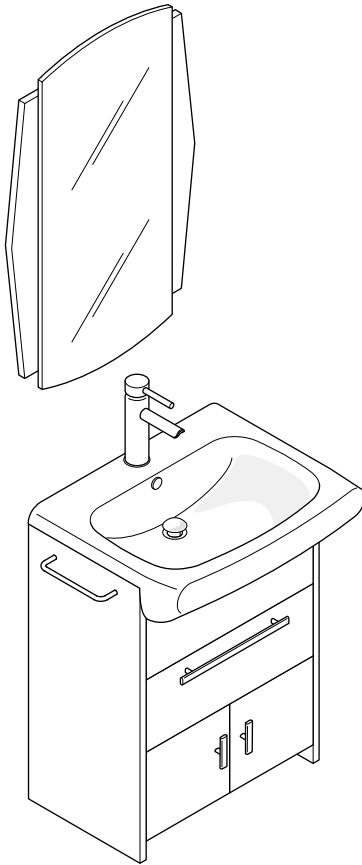


Vanity Front

Mirror

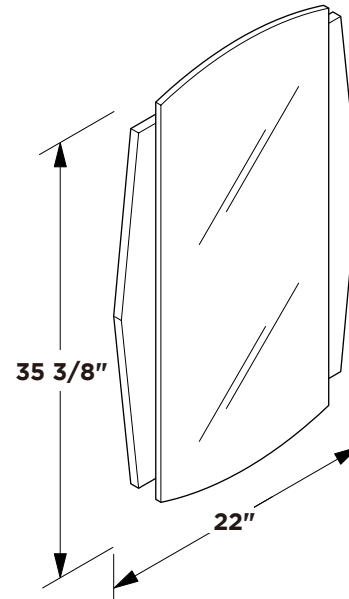


Vanity Back

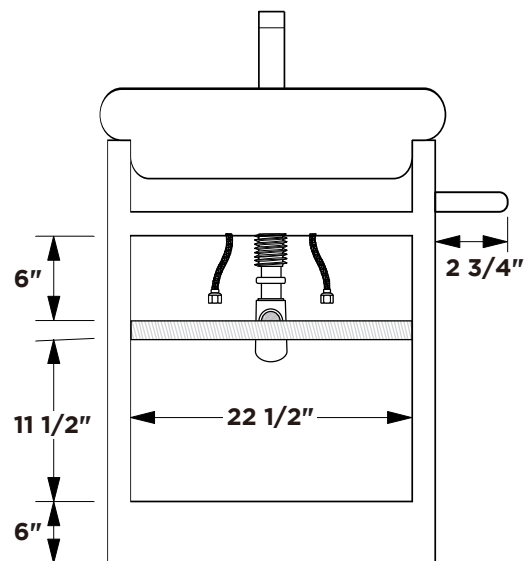
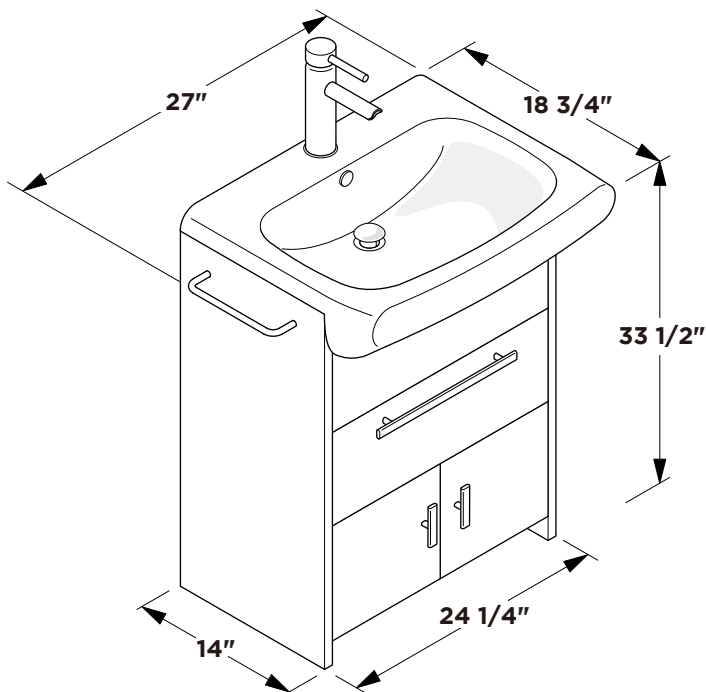


Note: All dimensions and specifications are approximate and subject to change without notice.

## TOOLS FOR ASSEMBLY

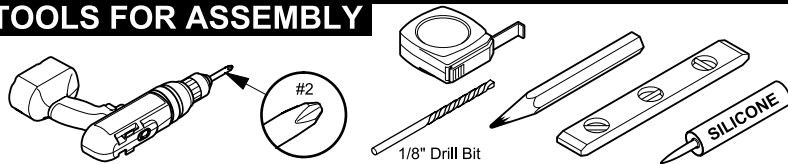


## PARTS

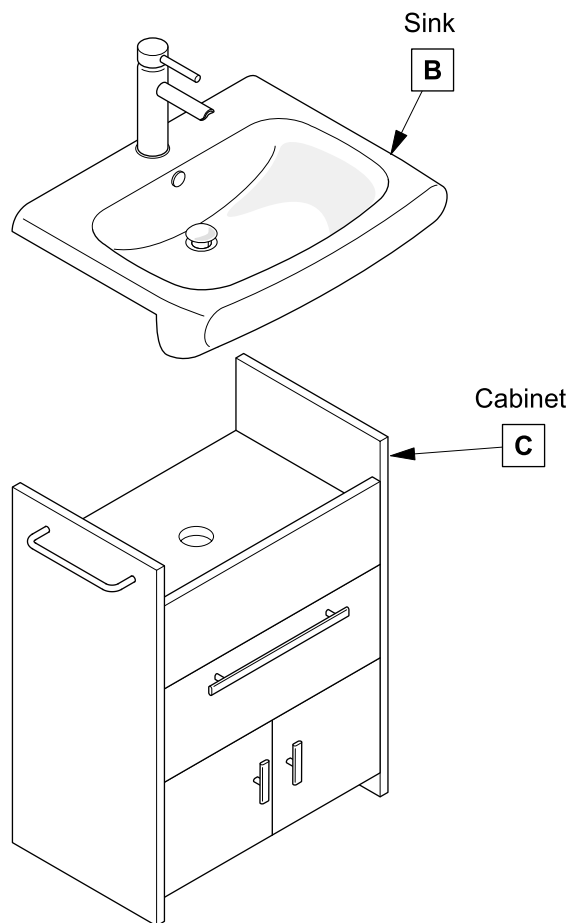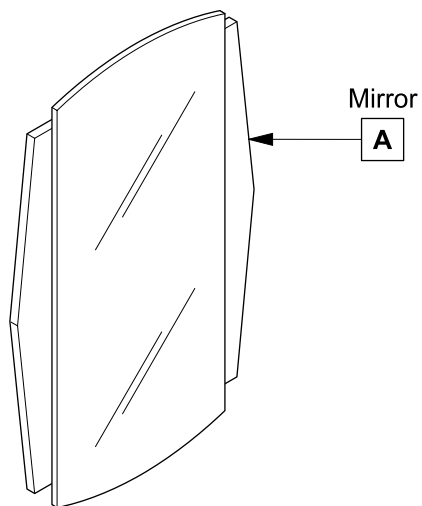

**1** Install cabinet (C)


**2** Open door (D)

**IMPORTANT:** Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.

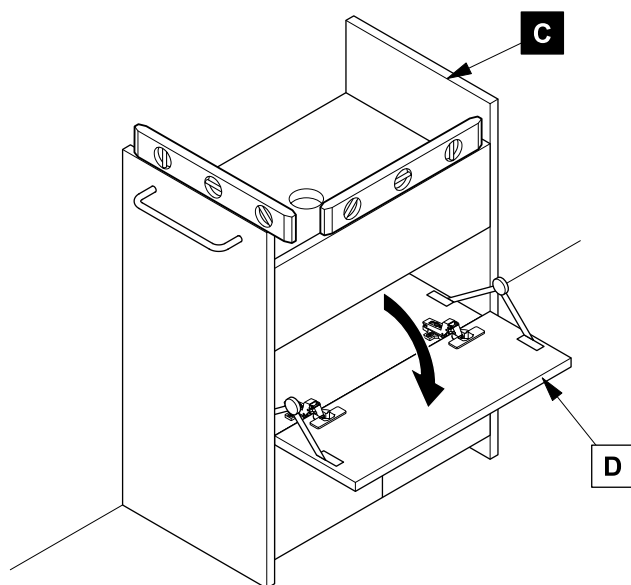


**3** Apply silicone and install sink (B)

**4** Install Mirror (A)

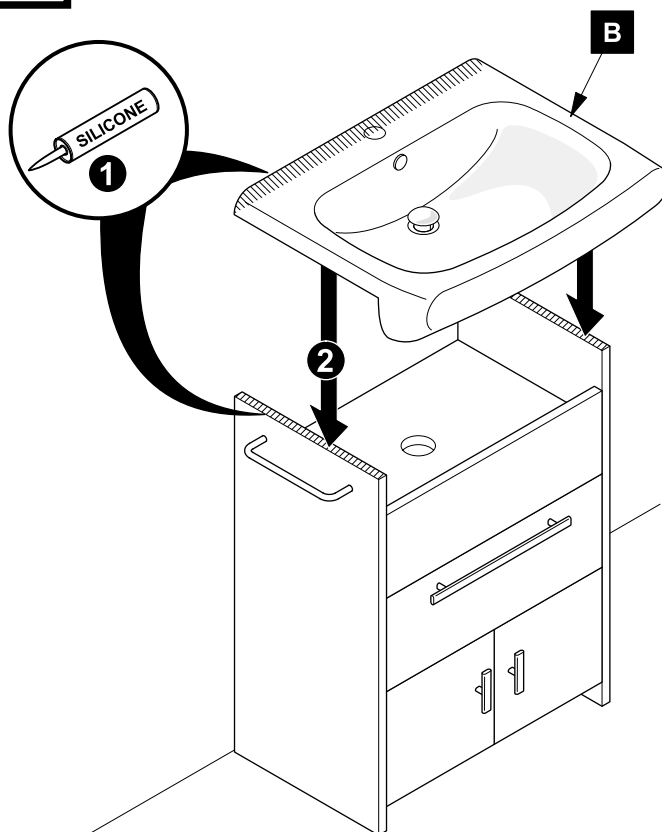


## P-TRAP AND POP-UP INSTALLATION INSTRUCTIONS

Your item may appear slightly different from the illustration

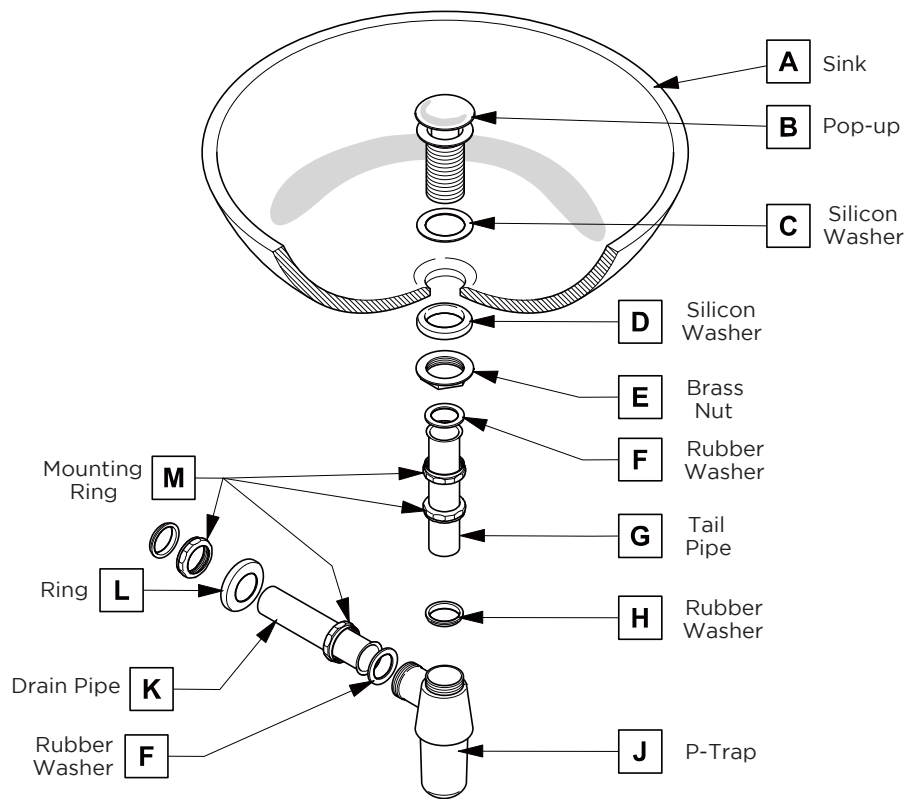


### POP-UP INSTALLATION

#### FOR SINKS WITHOUT OVERFLOW

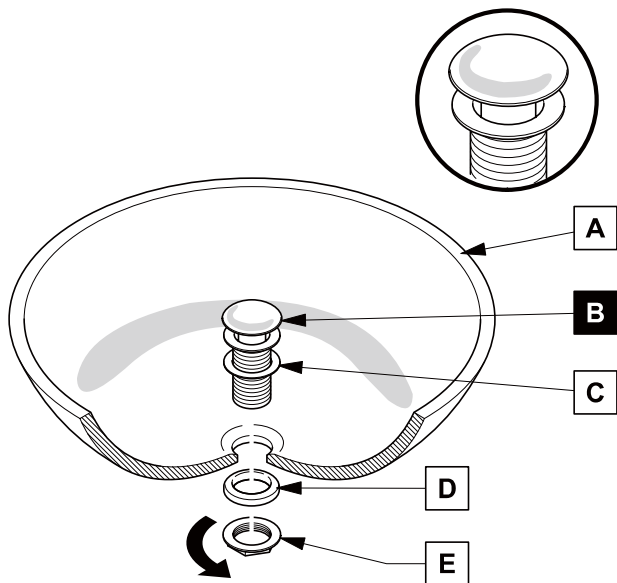

OR


#### FOR SINKS WITH OVERFLOW

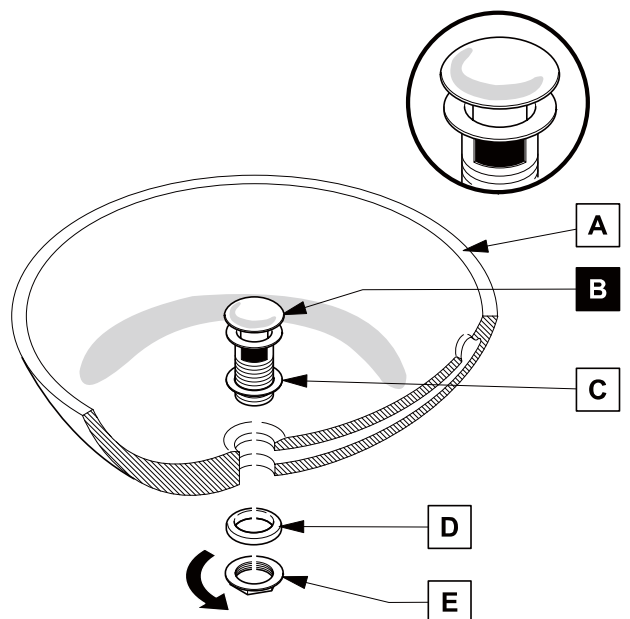

## P-TRAP INSTALLATION

1

Install tail pipe (G)

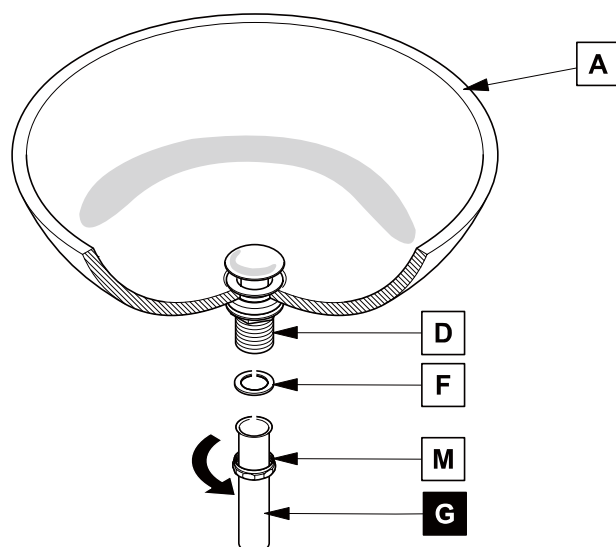

2

Install p-trap (J)

