



FVN3301 & FVN3307
INFINITO
INSTALLATION GUIDE

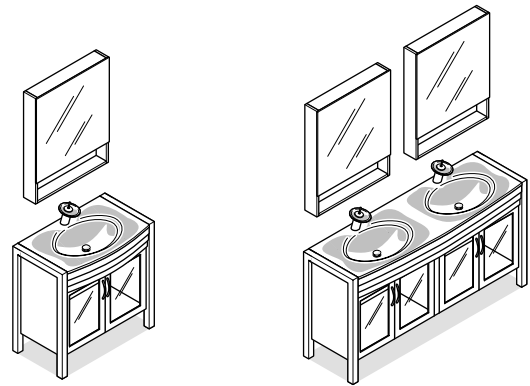

Medicine Cabinet

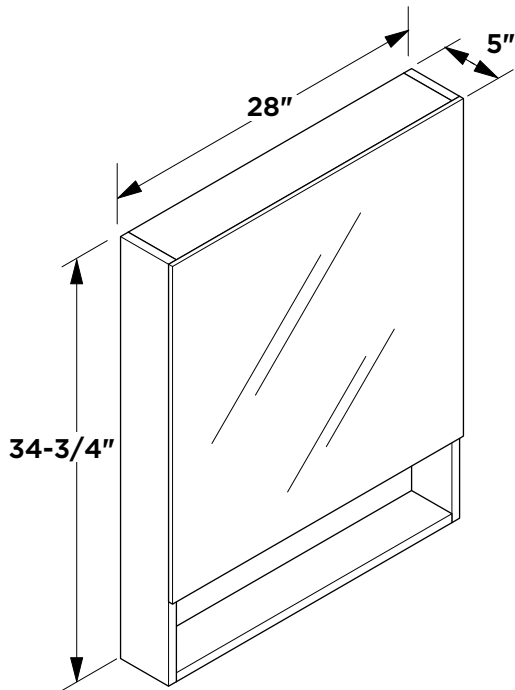


FVN3301


FVN3307

Model	Vanity Width A	Vanity Back B
FVN3301	35-1/4"	31-1/2"
FVN3307	67"	63-1/4"

Vanity Front

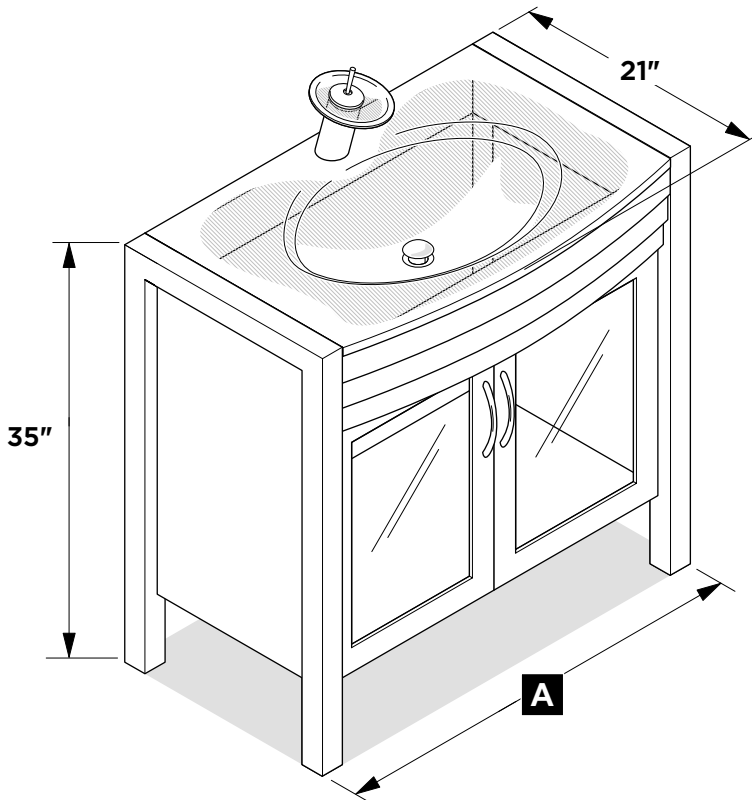


Vanity Back

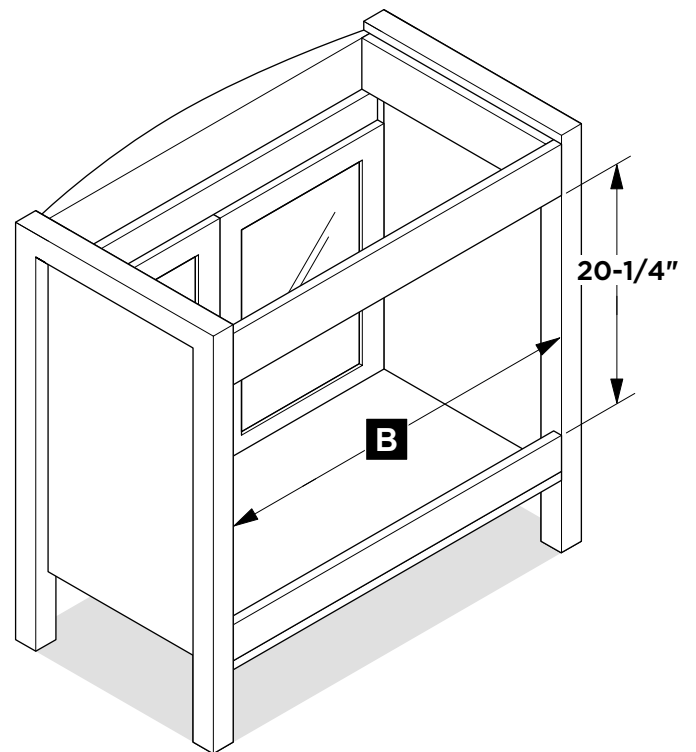


TOOLS FOR ASSEMBLY




PARTS

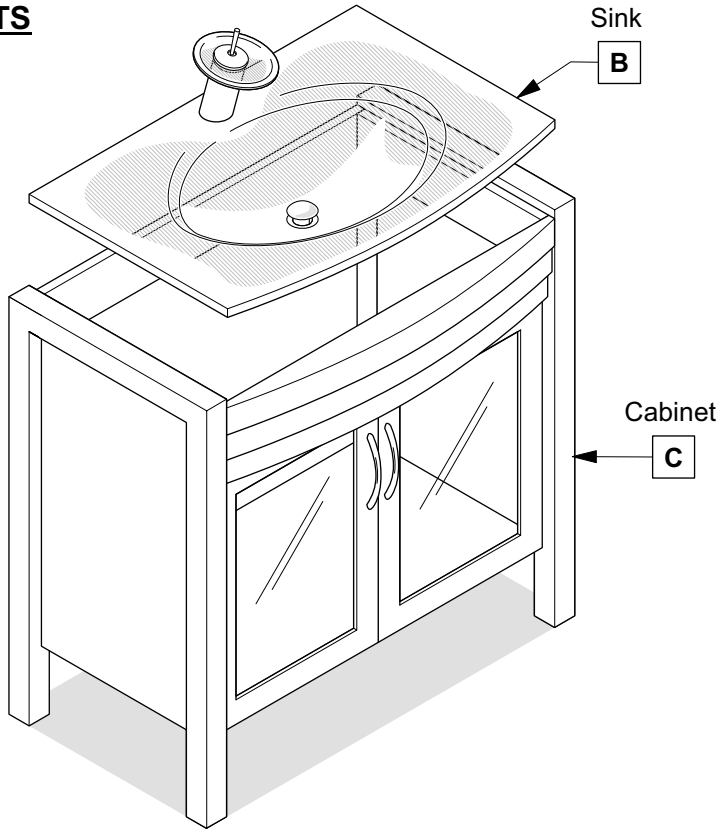

Mirror **A**

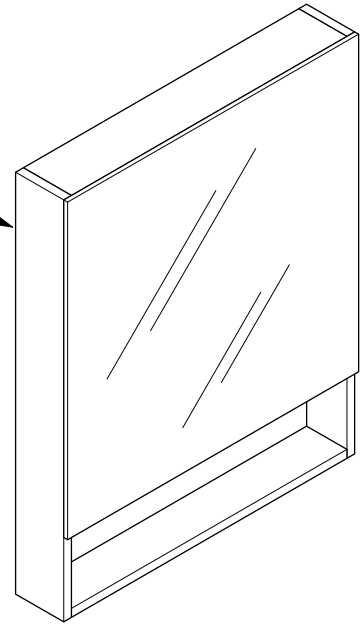

1 Position cabinet (C)

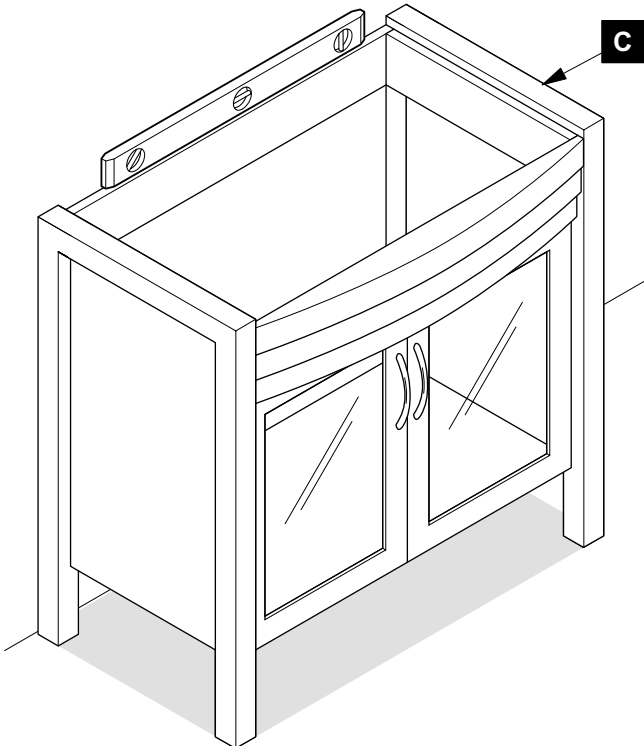

2 Apply silicone and install sink (B)

