





FVN3332  
**CORTESE  
INSTALLATION GUIDE**

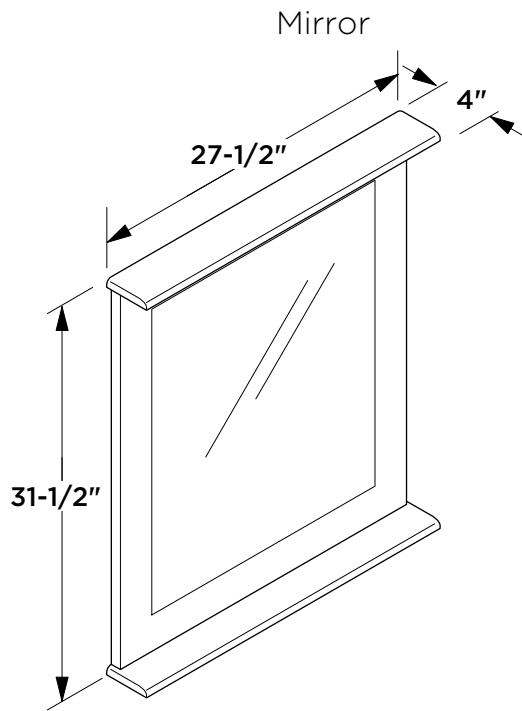



Mirror

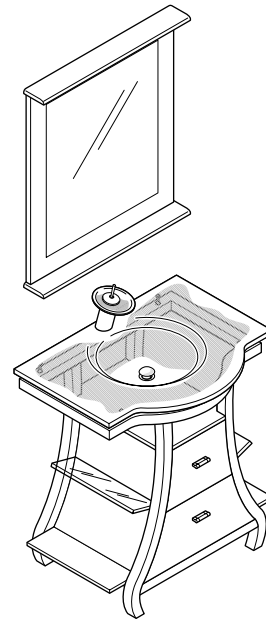


FVN3332

Vanity Front


Vanity Back

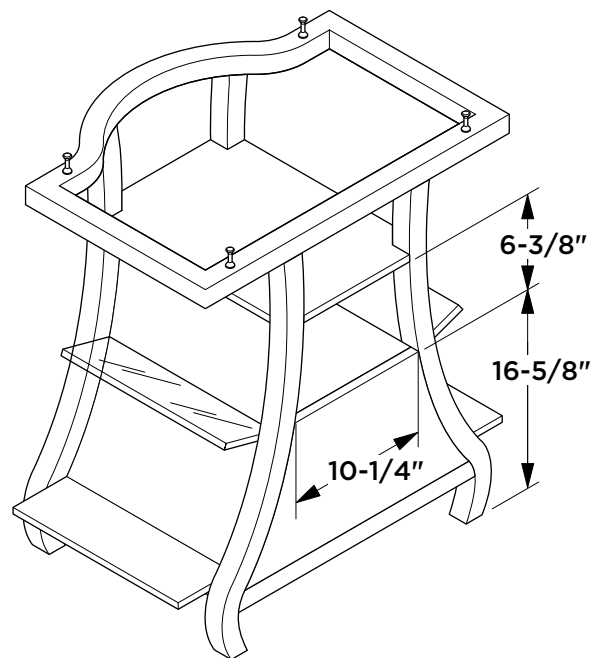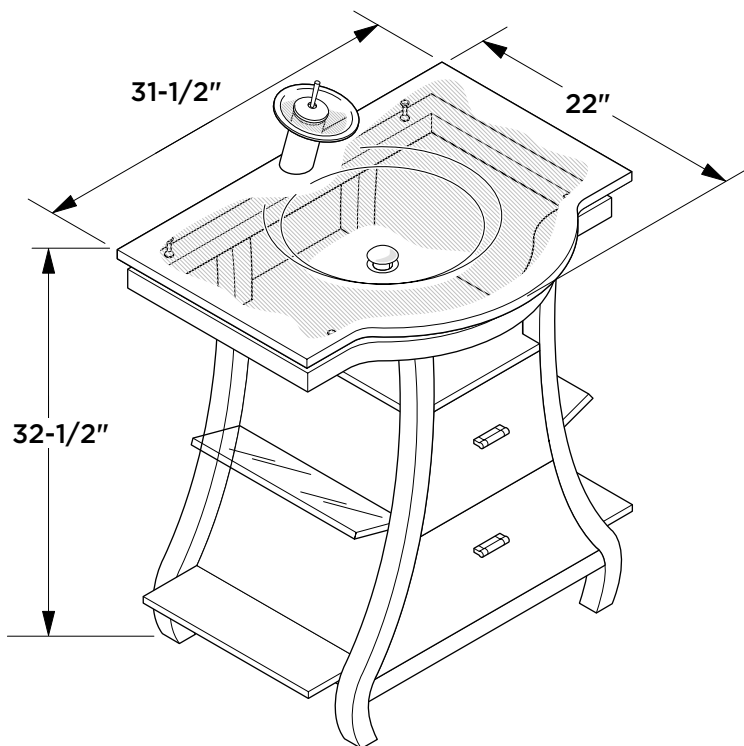


**TOOLS FOR ASSEMBLY**

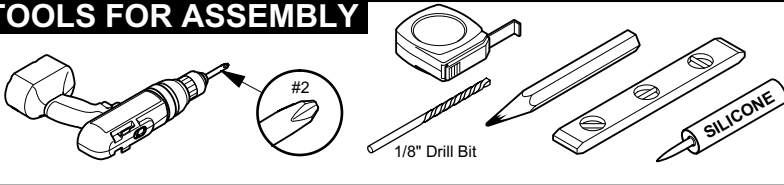


**PARTS**

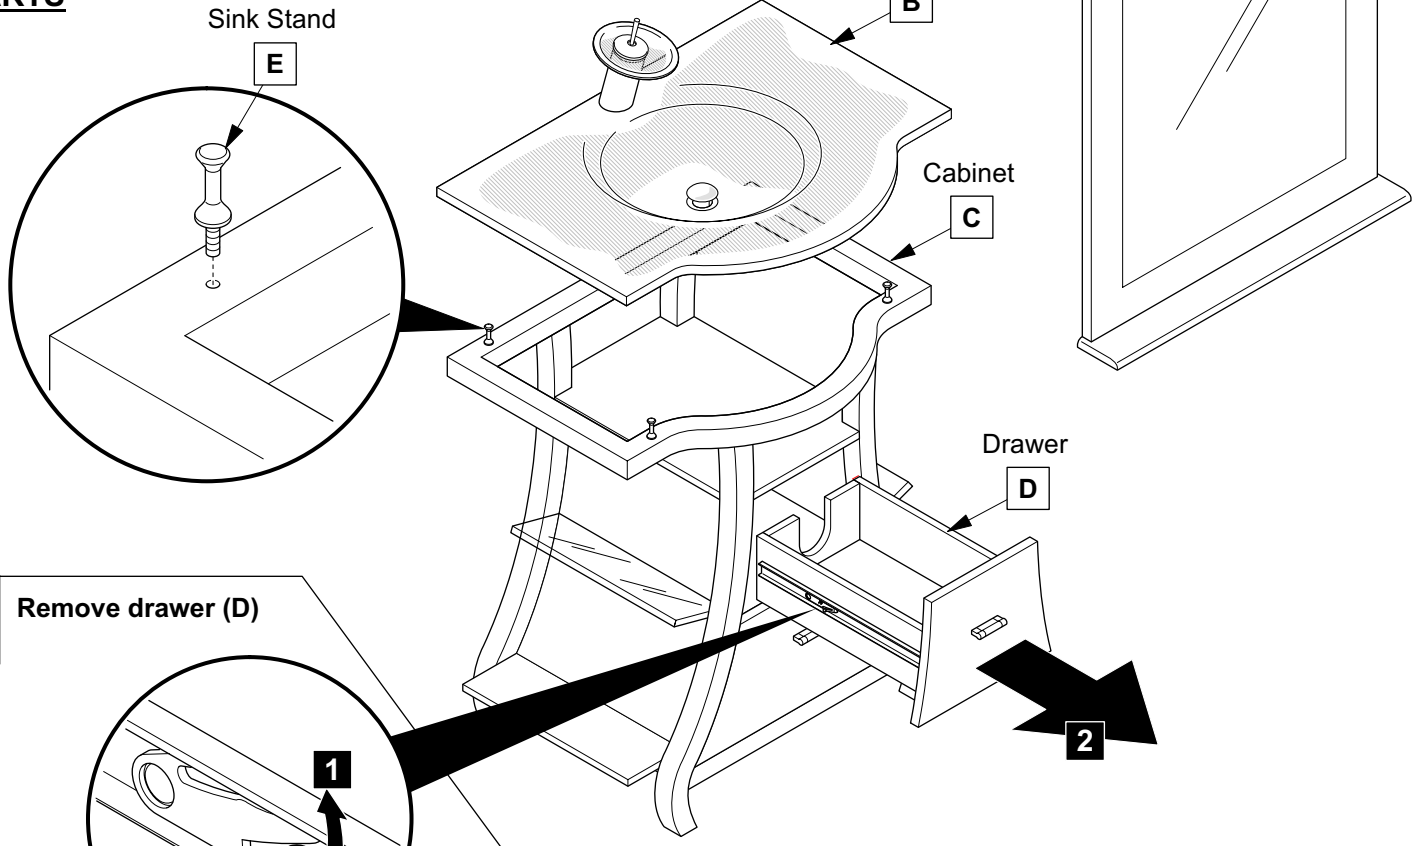

**1** Remove drawer (D)

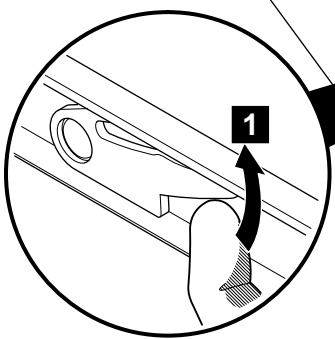

**2** Install cabinet (C)

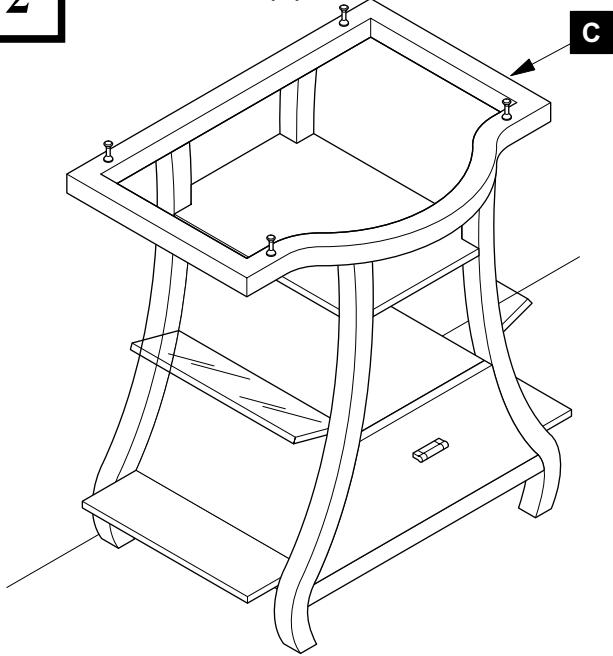

**3** Apply silicone and install sink (B)

**4** Install Mirror (A)

