


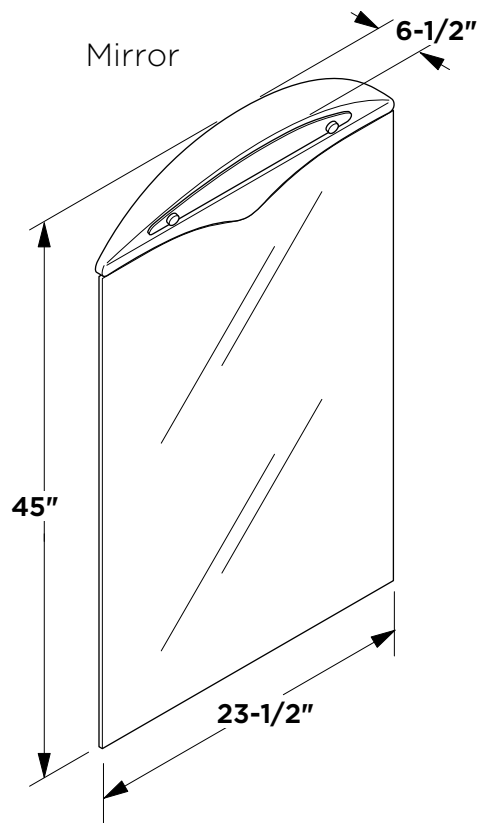

FVN5060
CALMO
INSTALLATION GUIDE


FRESCA™





Vanity Front




FVN5060

Vanity Back

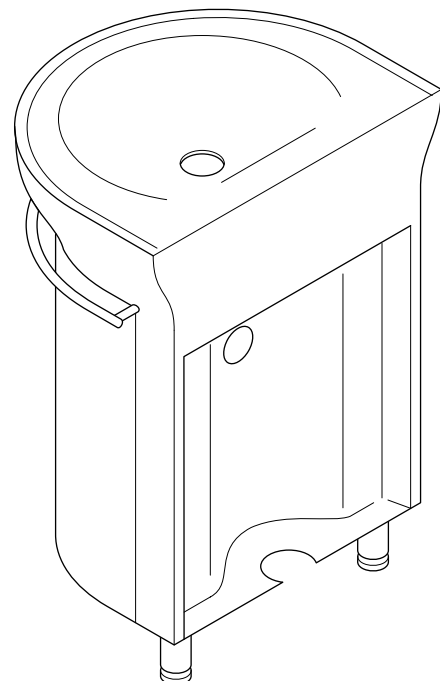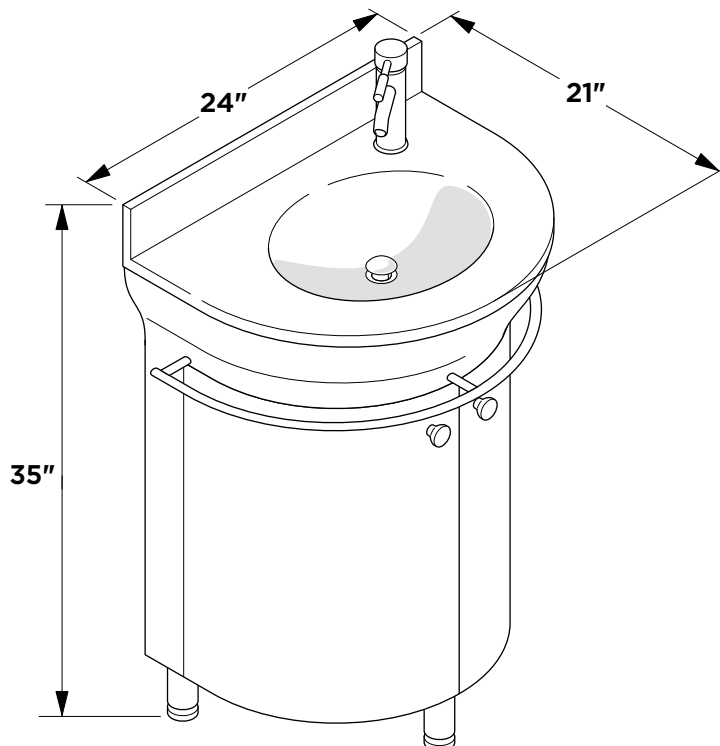

TOOLS FOR ASSEMBLY

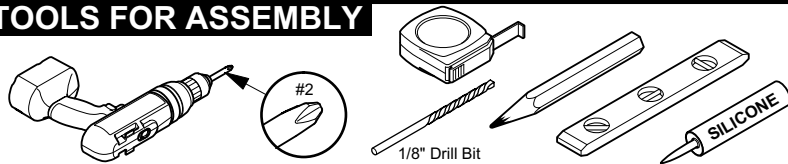


PARTS

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.


Mirror

A

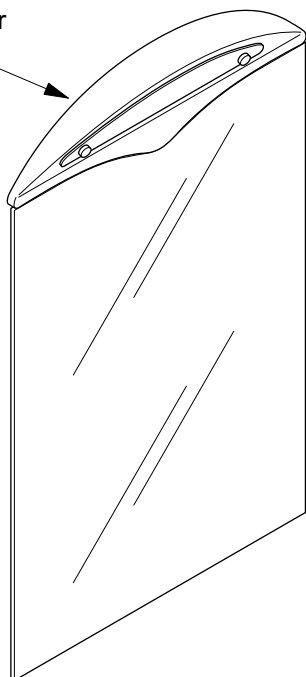


Sink

B

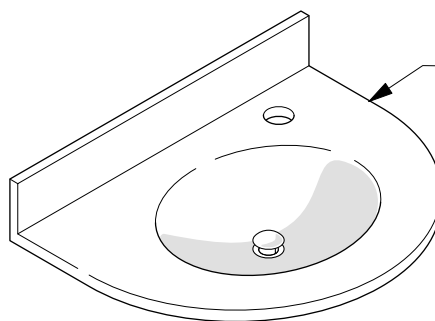


Cabinet

C

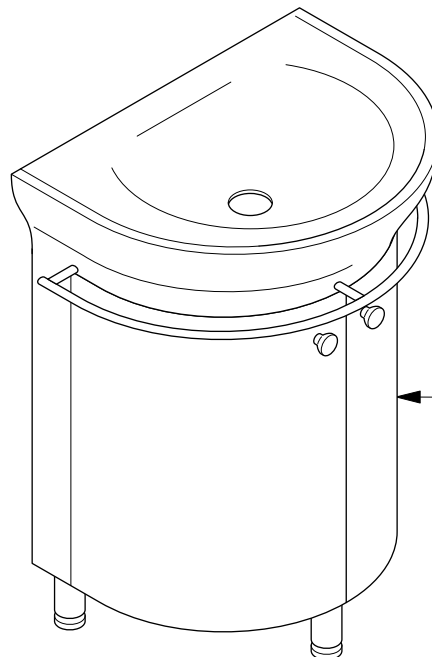


1

Position cabinet (C)

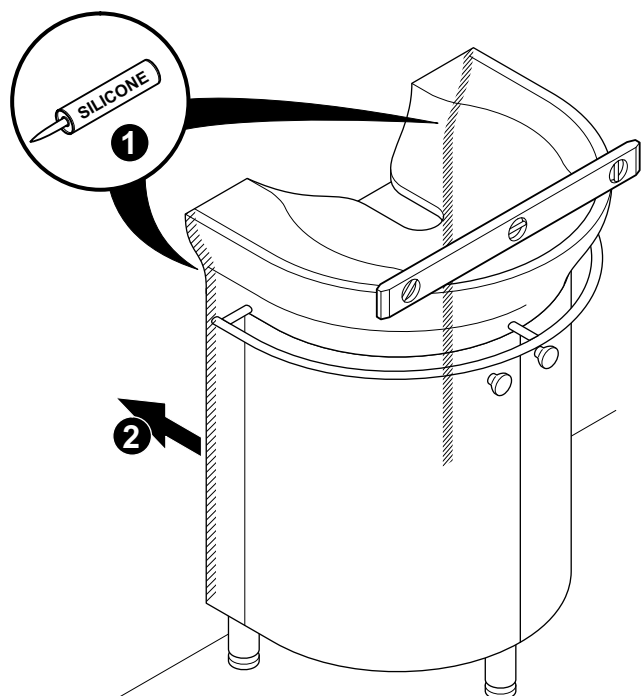

2

Apply silicone and install sink (B)

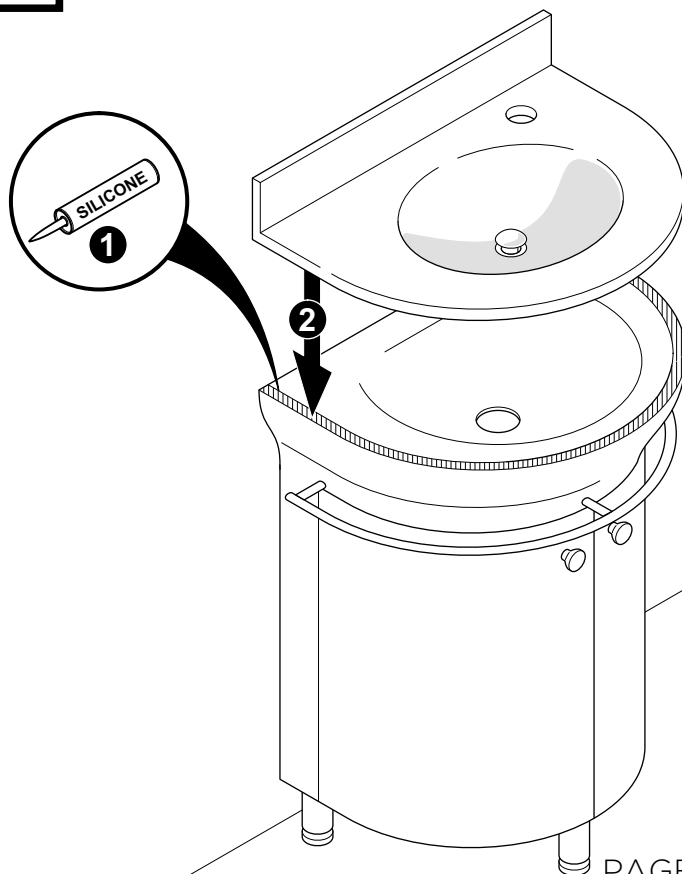

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.

