



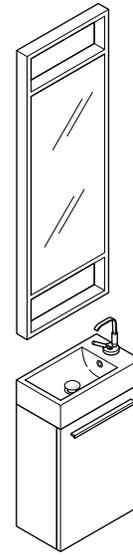


FVN8002
PULITO
INSTALLATION GUIDE

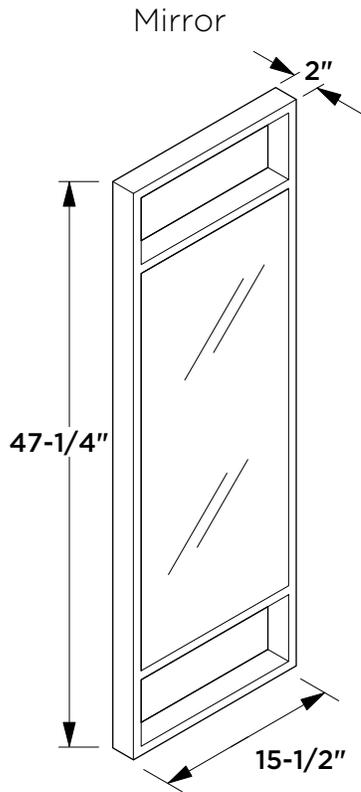


FVN8002

Vanity Front

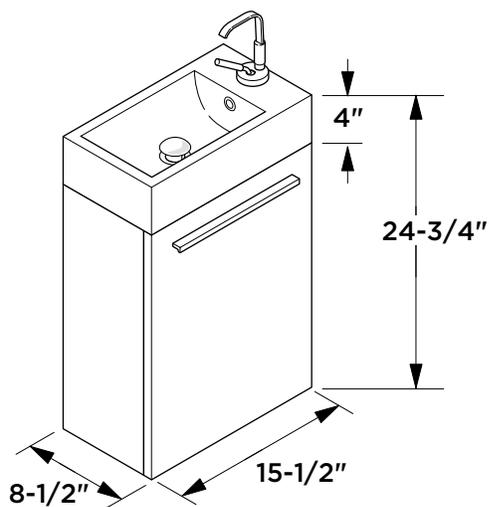


Vanity Back

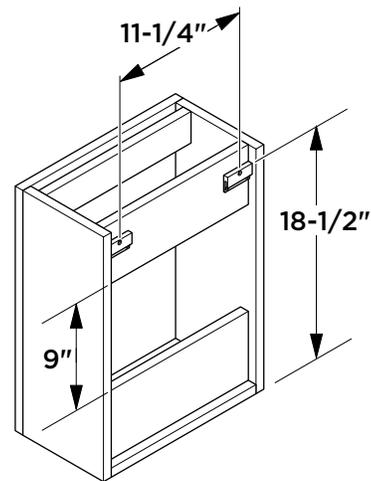


TOOLS FOR ASSEMBLY




PARTS

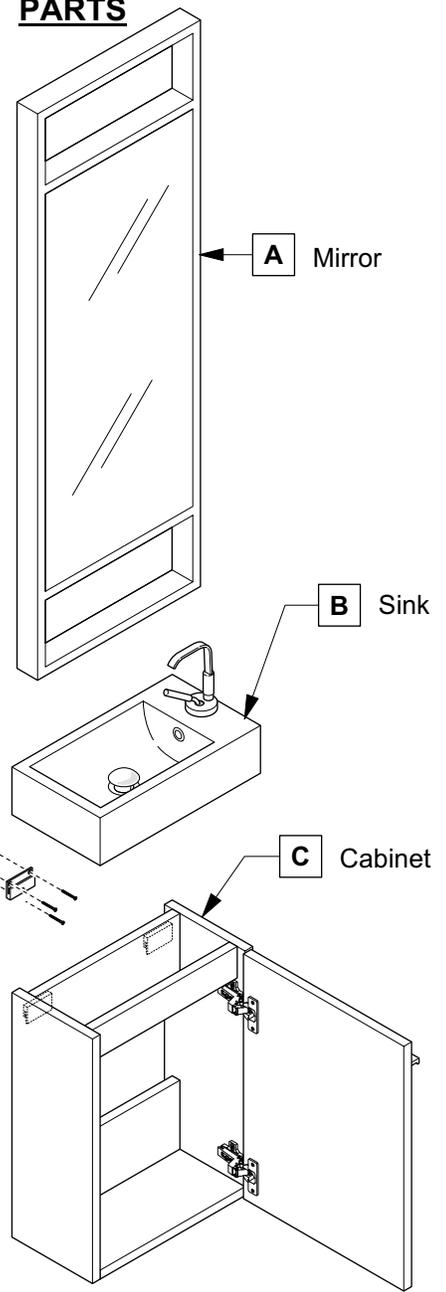

NOTE: Only use anchors (G) if stud (2"x4" frame) is not available.

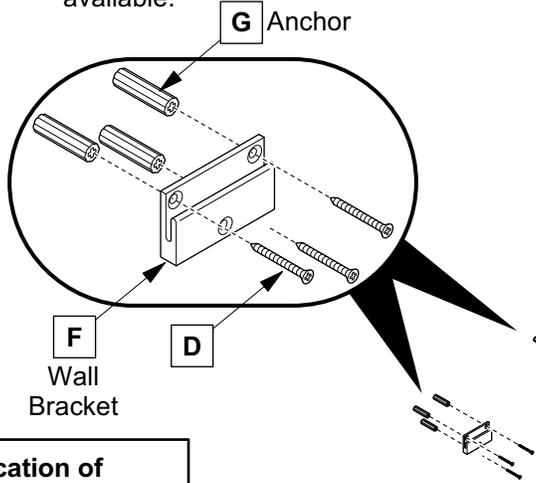


1 Locate cabinet (C) & mark location of each bracket

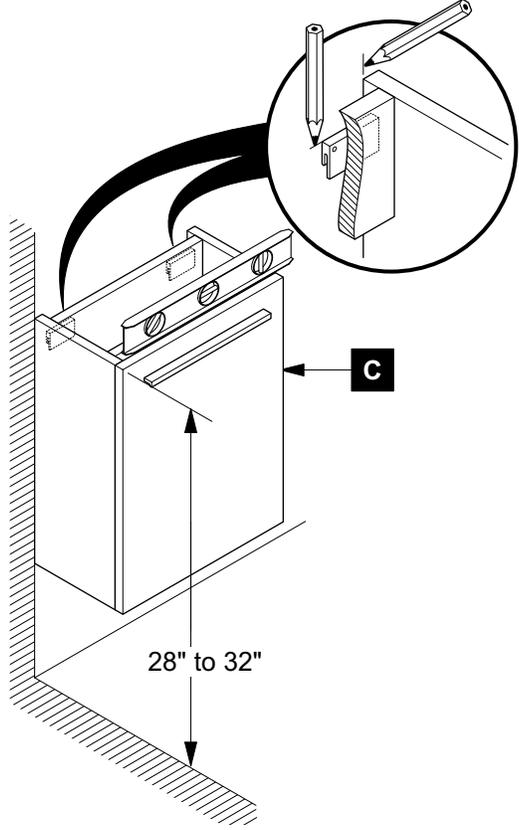


2 Install brackets (F)


IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.

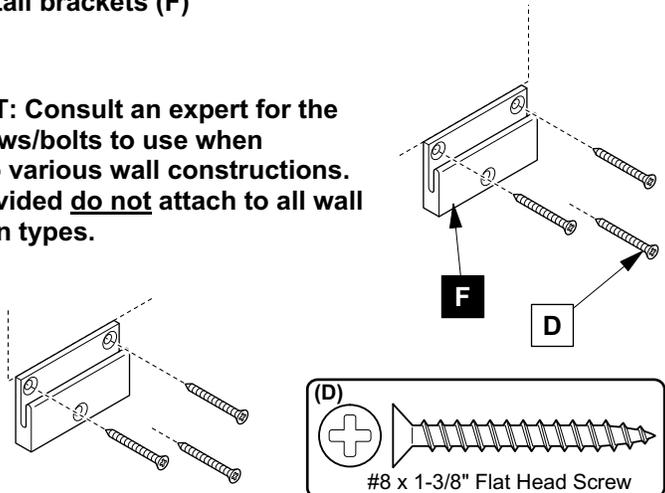

3 Apply silicone and install cabinet (C)

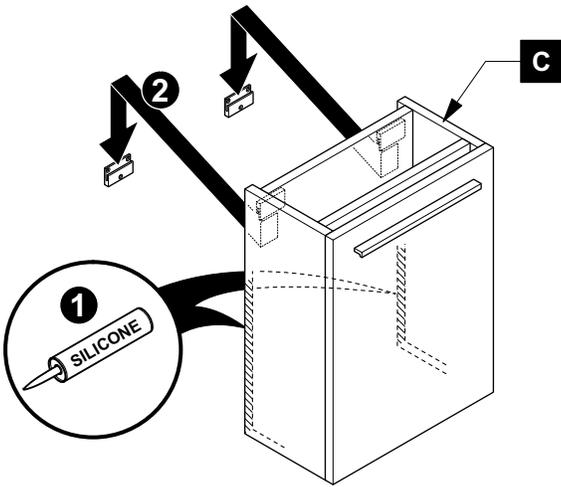

4 Apply silicone and install sink (B)

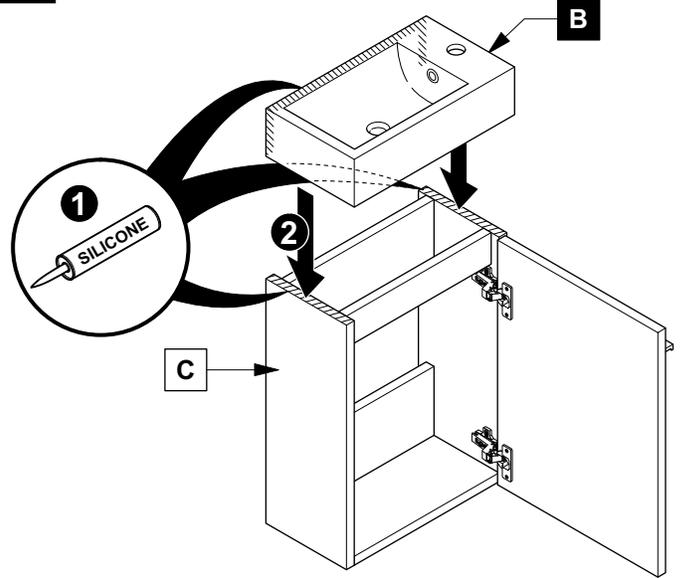

5 Install mirror (A)

