


ALLIER ALLIER

INSTALLATION GUIDE

CONTENTS:

Cabinet	(FCB8119HA-S)	PAGE 5
Sink	(FVS8119WH)	PAGE 5
Medicine Cabinet	(FMC8013)	PAGE 3
Countertop	(FCT8119WH-S)	PAGE 5



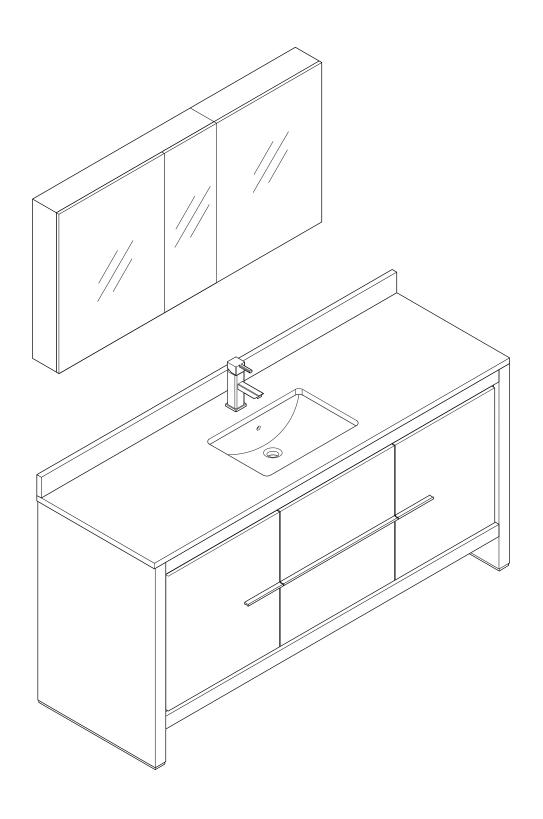




Ö FVN8119HA-S LIER RIO **INSTALLATION GUIDE**







DIMENSIONS

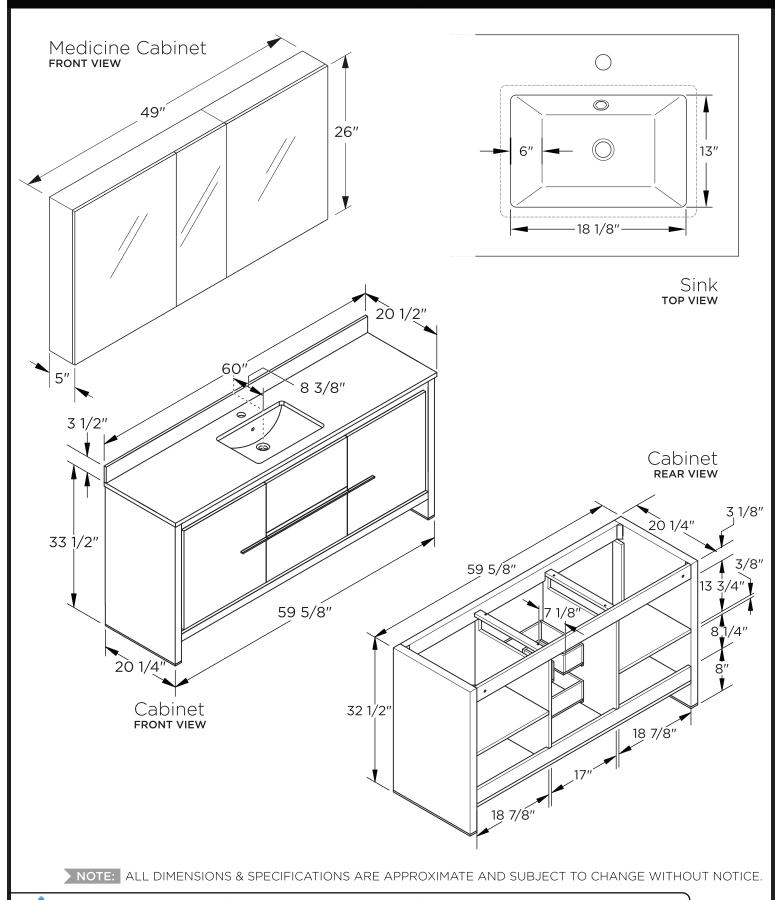


INSTALLATION GUIDE

PAGE 2

FVN8119HA-S


CABINET DIMENSIONS

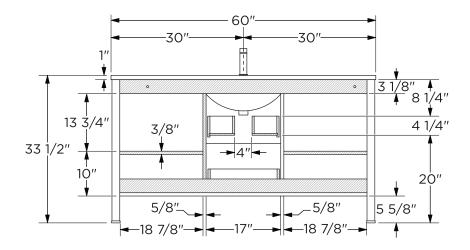

NOTE: ALL DIMENSIONS & SPECIFICATIONS ARE APPROXIMATE AND SUBJECT TO CHANGE WITHOUT NOTICE.

MEDICINE CABINET INSTALLATION

1 Attach side mirrors (C) to the medicine cabinet (A).

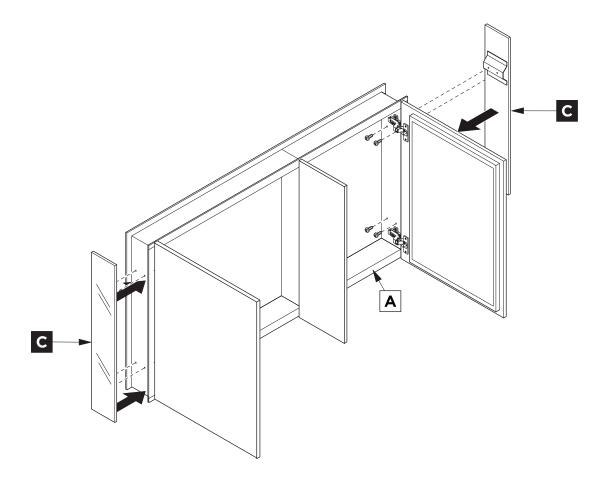




FVN8119HA-S

ALLIER RIO

INSTALLATION GUIDE


MEDICINE CABINET INSTALLATION

2 Mark cabinet's (A) location.

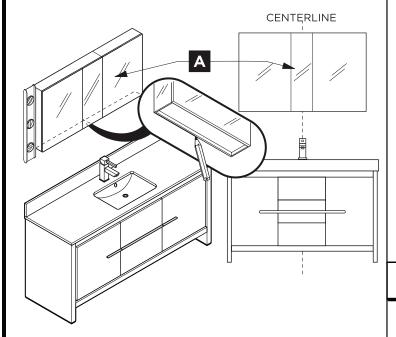


3 Attach bottom bracket **(K)** to the wall.


IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided <u>do not</u> attach to all wall construction types. Anchors are not required if brackets are installed in stud.

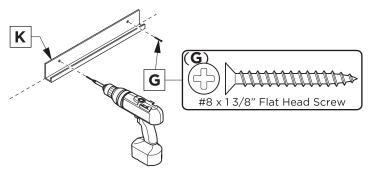

* Place cabinet (A) on the bottom bracket (K) and secure it with a top bracket (L).

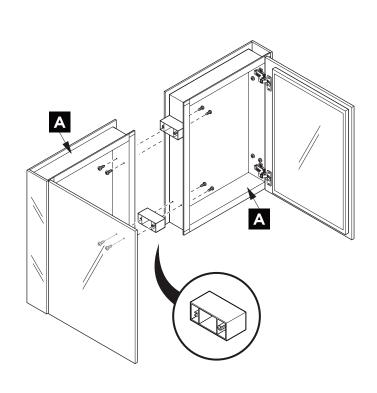

Join the cabinets (A) together.

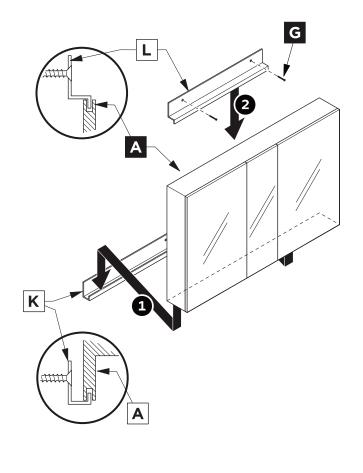

*This step requires assistance to hold cabinet in place until top bracket is securely attached.

Ö


4


FVN8119HA-S

ALLIER RIO

INSTALLATION GUIDE

DRAWER REMOVAL & INSTALLATION

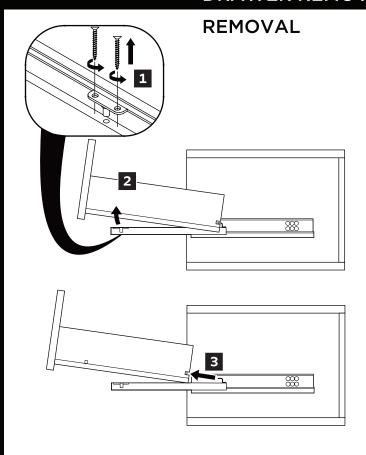


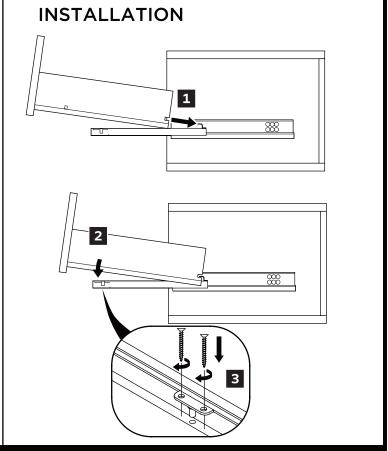


CABINET/SINK/COUNTERTOP INSTALLATION

Remove the drawers and open the doors then attach cabinet to the wall using a drill.


Apply a bead of silicone on the top of the sink (E) and connect the sink to the counter-top (D).

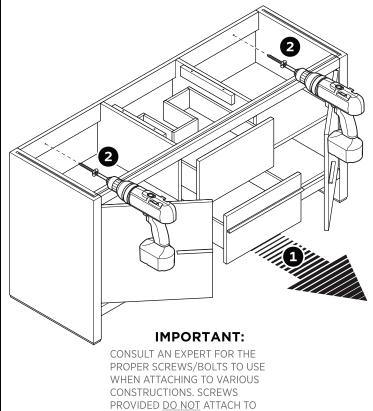

ALL WALL CONSTRUCTION TYPES.

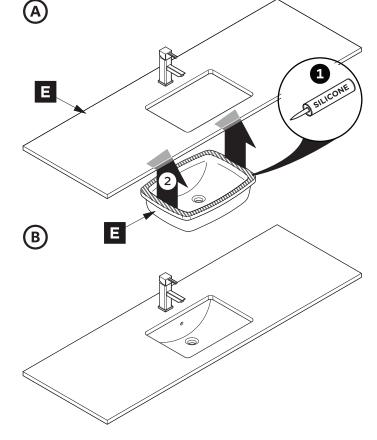


FVN8119HA-S INSTALLATION GUIDE

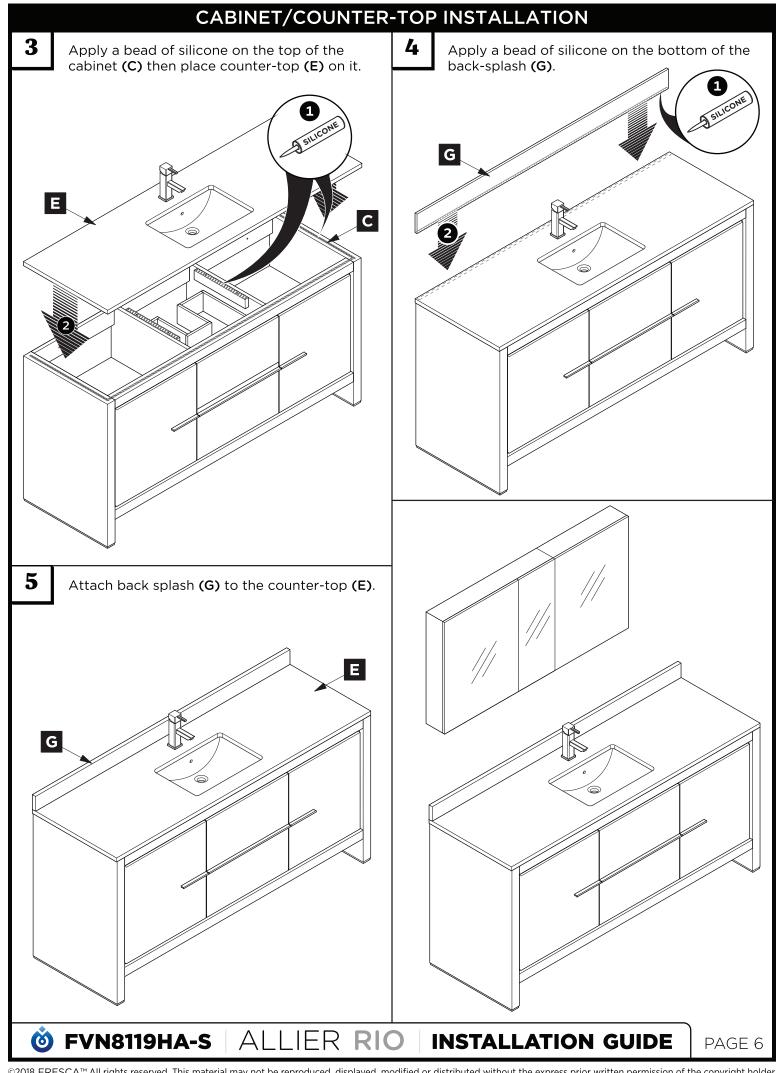

P-TRAP & POP-UP INSTALLATION INSTRUCTIONS

Your item may appear slightly different from the illustration.

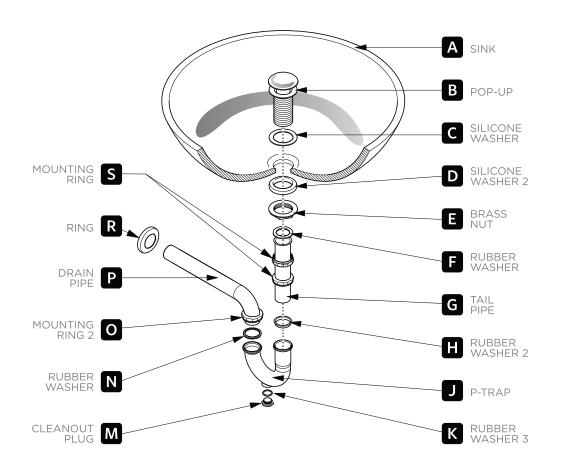

POP-UP INSTALLATION INSTRUCTIONS

